

# Q'UBE<sup>®</sup>



**FULLY ADAPTABLE  
MODULAR  
SECUREMENT SOLUTION**



# Q'UBE<sup>®</sup>



## Introducing Q'UBE

A fully adaptable, complete bolt-in solution that can be mounted into virtually any vehicle application without the need to run cables or wires.



### Fully Adaptable

Ideal for both new and retrofit applications, the Q'UBE installs into Transit, Para-Transit and School Bus vehicles and can work with existing anchorage systems.



### Xpress Mechanical Delay

An easy-to-reach rear securement release with a positive "Locked" and "Unlocked" position. The Xpress Paddle Handle gives drivers enough time to properly secure rear wheelchair tie-downs.



### Modular Design

The low-profile unit fits under wheelchair footrests and was designed as a complete bolt-in solution that can be mounted for a variety of vehicle applications.



# The Q'UBE features a wide assortment of brackets to work with your existing layouts and is the perfect retrofit for your fleet.

Every unit features our patented Xpress mechanical delay system, an easy-to-reach release that significantly reduces wheelchair securement time and effort.


## Q'UBE Units

Each Unit Includes: Q'UBE Assembly, Bolts, Flat Washers, Lock Washers and Installation Instructions



**Q060002 Right Handed Unit**

Shown with optional Slide 'N Click brackets, the right handed Q'UBE allows the driver to activate the time delay by moving the lever to the left side of the unit.

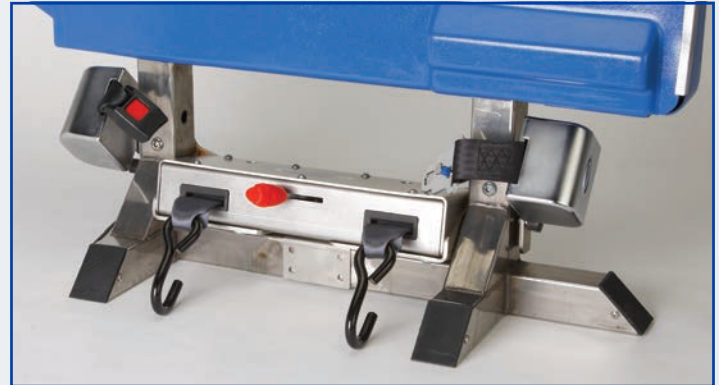

**Q060003 Left Handed Unit**

Shown with optional pedestal mounting brackets, the left handed Q'UBE allows the driver to activate the time delay by moving the lever to the right side of the unit.

## Mounting Options



**QS00034 L-Track Perpendicular**

Kit Includes: (2) Rear Mount Brackets  
(6) Seat Anchor Assembly



**QS00032 L-Track Parallel**

Kit Includes: (1) RH Floor Bracket  
(1) LH Floor Bracket  
(6) Seat Anchor Assembly



**QS00033 Floor Bracket**

Kit Includes: (1) RH Floor Bracket  
(1) LH Floor Bracket  
(6) Bolts (6) Locknuts  
(12) Washers



**QS00014 Slide 'N Click**

Kit Includes: (1) RH Slide 'N Click Bracket  
(1) LH Slide 'N Click Bracket



**QS00035 Pedestal Mount**

Kit Includes: (1) RH Leaf Bracket  
(1) LH Leaf Bracket



**QS00023 Pin Connector Option**

Allows the connection of existing occupant securements already installed in vehicle.



[WWW.QSTRAINT.COM/QUBE](http://WWW.QSTRAINT.COM/QUBE)

© 2017 Q'STRAIN®. All Rights Reserved.

Q'STRAIN®, Q'STRAIN® logo, and Q'UBE™ are registered trademarks of Q'STRAIN®, Inc.

**Q'STRAIN EUROPE**

72-76 John Wilson Business Park  
Whitstable, Kent, CT5 3QT  
United Kingdom  
Tel: +44 (0)1227 773035  
Fax: +44 (0)1227 770035  
Email: [info@qstraint.co.uk](mailto:info@qstraint.co.uk)

**Q'STRAIN AMERICA**

4031 NE 12th Terrace  
Oakland Park, FL 33334  
Tel: 800-987-9987  
Fax: 954-986-0021  
Email: [qstraint@qstraint.com](mailto:qstraint@qstraint.com)

**Q'STRAIN AUSTRALIA**

Tramanco Pty Ltd.  
21 Shoebury Street,  
Rocklea, Australia, QLD. 4106  
Tel: +61 7 3892 2311  
Fax: +61 7 3892 1819  
Email: [info@tramanco.com.au](mailto:info@tramanco.com.au)